




# WALL SAFES


**DIGITAL, COMBINATION OR KEY**

**ALL CMI SAFES COME WITH A FIVE YEAR WARRANTY, EXCLUDING FREIGHT & TRAVELLING, WITH A 12 MONTH WARRANTY ON LOCKS.**

MODEL **W1K**       $\overset{H}{230} \times \overset{W}{230} \times \overset{D}{152}$       12Kg

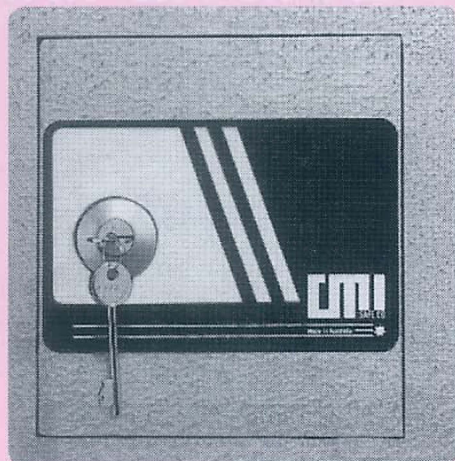

MODEL **W2D**       $\overset{H}{230} \times \overset{W}{305} \times \overset{D}{152}$       16Kg

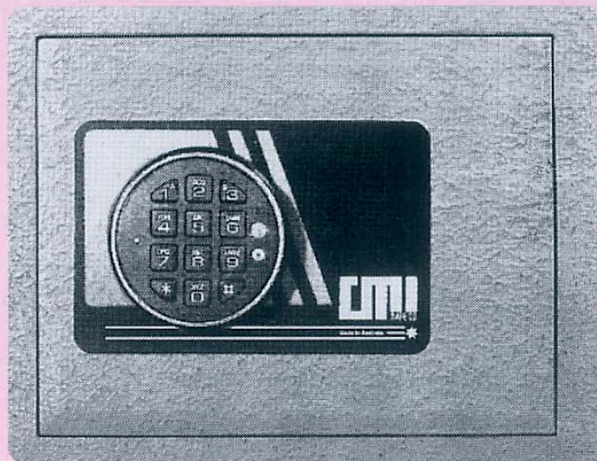

CMI Wall Safes are designed to fit into a standard cavity brick wall.

**DOOR:** Heavy 12mm steel plate with full back dog locking, and hinged on hardened 12mm pins.

**BODY:** Reinforced 3 mm steel with heavy steel frame around front edges.

**LOCKING:** All locks are protected by 6mm case hardened plates.

All models have one removable shelf.

CODE	KEY	COMBINATION	DIGITAL
W1	\$	\$	\$
W2	\$	\$	\$
W3	\$	\$	\$

ALL MODELS HAVE 4 EACH 12MM X 75MM BOLTS TO EXTEND INTO BRICK CAVITY

MODEL **W3C**       $\overset{H}{305} \times \overset{W}{305} \times \overset{D}{152}$       20Kg



**WALL SAFES - NIL FIRE RESISTANCE**

**SUGGESTED INSURABLE CASH RATING FOR WALL SAFES IN AN UNSUPPORTED (NO ALARMS) DOMESTIC SITUATION IS \$2,000**

**CMI SAFE CO.** A.C.N. 057 073 033

**Head Office: 244 WEST STREET, CARLTON, N.S.W. 2218**

**Phone: (02) 9547 1488 (5 LINES) Fax: (02) 9547 2104**

**Web Site: <http://www.cmisafe.com.au>**

**Email: [sales@cmisafe.com.au](mailto:sales@cmisafe.com.au)**

AVAILABLE FROM



Asia Cash Management Systems Co., Ltd.  
338/47 Baan Klang Muang Meng Jai-Ladprao,  
Soi Ladprao 80 (Jantima), Ladprao Rd., Wangthonglang  
Bangkok 10310 Thailand  
Tel.: +66 (0) 89 812 0088  
E-mail: [sales@asiacashms.com](mailto:sales@asiacashms.com)

**MADE IN AUSTRALIA**



# INSTALLATION OF STANDARD CMI WALL SAFE INTO STANDARD CAVITY BRICK WALL.

**Step 1. Measure safe and mark out wall section to be removed.**

**Step 2. Using a masonry disk or by drilling a series of holes in a vertical line and with the aid of a hammer and bolster, remove only enough bricks to accept the safe.**



**Step 3. Paint top, bottom & both sides of safe with cemstick for mortar adhesion to safe.**

**Step 4. Lay a bed of mortar and paste top and both sides of safe with mortar,  
and insert safe flush into wall.**

**Step 5. Wind out anchor bolts into cavity from inside the safe.**

**Step 6. Finish mortar flush with wall and clean up.**

**~ Allow 24 hours for mortar to set before using the safe ~**

**MADE IN AUSTRALIA**